


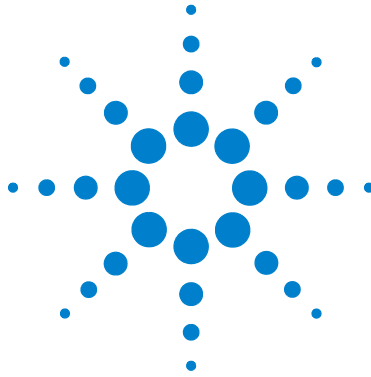

Agilent 281A/B Adapters

Operating and Service Manual



Agilent Technologies

Notices

© Agilent Technologies, Inc. 2000 - 2013

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

00281-90045

Edition

Second Edition, April 2013

Printed in Malaysia

Agilent Technologies, Inc.

Phase 3 Bayan Lepas Free Industrial Zone
Bayan Lepas, Penang 11900 Malaysia

Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

U.S. Government Restricted Rights. Software and technical data rights granted to the federal government include only those rights customarily provided to end user customers. Agilent provides this customary commercial license in Software and technical data pursuant to FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for the Department of Defense, DFARS 252.227-7015 (Technical Data - Commercial Items) and DFARS 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation).

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

Certification

Agilent Technologies certifies that this product met its published specifications at the time of shipment from the factory. Agilent Technologies further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (NIST, formerly NBS), to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.

Warranty

Custom systems are warranted by contractual agreement between Agilent Technologies and the customer.

This Agilent Technologies system product is warranted against defects in materials and workmanship for a period corresponding to the individual warranty periods of its component products. Instruments are warranted for a period of one year. During the warranty period, Agilent Technologies will, at its option, either repair or replace products that prove to be defective.

Warranty service for products installed by Agilent Technologies and certain other products designated by Agilent Technologies will be performed at Buyer's facility at no charge within Agilent Technologies service travel areas. Outside Agilent Technologies service travel areas, warranty service will be performed at Buyer's facility only upon Agilent Technologies' prior agreement and Buyer shall pay Agilent Technologies' round trip travel expenses. In all other areas, products must be returned to a service facility designated by Agilent Technologies.

For products returned to Agilent Technologies for warranty service, Buyer shall prepay shipping charges to Agilent Technologies and Agilent Technologies shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to Agilent Technologies from another country.

Agilent Technologies warrants that its software and firmware designated by Agilent Technologies for use with an instrument will execute its programming instructions when properly installed on that instrument. Agilent Technologies does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY. The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. AGILENT TECHNOLOGIES SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES. THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. AGILENT TECHNOLOGIES SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

YEAR 2000. Agilent Technologies warrants that each Agilent Technologies hardware, software, and firmware product on Agilent Technologies' Corporate Price List (dated July 1, 1998 or later) delivered under the product's contract of sale will be able to accurately process date data (including, but not limited to, calculating, comparing, and sequencing) from, into, and between the twentieth and twenty-first centuries, and the years 1999 and 2000, including leap year calculations, when used in accordance with the product documentation provided that all other products (that is, hardware, software, firmware) used in combination with such Agilent Technologies product(s) properly exchange date data with it. If the agreement requires that specific Agilent Technologies products must perform as a system in accordance with the foregoing warranty, then that warranty will apply to those Agilent Technologies products as a system, and Customer retains sole responsibility to ensure

the year 2000 readiness of its information technology and business environment. The duration of this warranty extends through January 31, 2001.

The remedies available under this warranty will be defined in, and subject to, the terms and limitations of the warranties contained in the contract of sale. To the extent permitted by local law, this warranty applies only to branded Agilent Technologies products and not to products manufacture by others that may be sold or distributed by Agilent Technologies. Nothing in this warranty will be construed to limit any rights or remedies provided elsewhere in the contract of sale with respect to matters other than year 2000 compliance.

Assistance

Product maintenance agreements and other customer assistance agreements are available for Agilent Technologies products.

For assistance, call your local Agilent Technologies Sales and Service Office (Refer to [“Contacting Agilent”](#) on page 7).

Safety Earth Ground



This is a Safety Class I product (provided with a protective earthing terminal). An uninterruptible safety earth ground must be provided from the main power source to the product input wiring terminals, power cord, or supplied power cord set. Whenever it is likely that the protection has been impaired, the product must be made inoperative and secured against any unintended operation.

Before Applying Power

Verify that the product is configured to match the available main power source as described in the input power configuration instructions in this manual. If this product is to be powered by autotransformer, make sure the common terminal is connected to the neutral (grounded) side of the ac power supply.

Contacting Agilent

For more information, please contact your nearest Agilent office.

Americas

Canada	(877) 894-4414
Latin America	305 269 7500
United States	(800) 829-4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	81 426 56 7832
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Thailand	1 800 226 008

Europe

Austria	0820 87 44 11
Belgium	32 (0) 2 404 93 40
Denmark	45 70 13 15 15
Finland	358 (0) 10 855 2100
France	0825 010 700
Germany	01805 24 6333
Ireland	1890 924 204
Italy	39 02 92 60 8484
Netherlands	31 (0) 20 547 2111
Spain	34 (91) 631 3300
Sweden	0200-88 22 55
Switzerland(French)	41 (21) 8113811 (Opt 2)
Switzerland(German)	0800 80 53 53 (Opt 1)
United Kingdom	44 (0) 118 9276201
Other European Countries:	www.agilent.com/find/contactus


Or, go to www.agilent.com/find/assist for more information.

This page is intentionally left blank.

Contents

1	Introduction	11
	Product Overview	12
2	Installation	13
	Initial Inspection	14
	Operation	16
	Protect Flanges	16
	Operating Procedure	16
	Performance Test	16
3	Specification	17
	General Specifications	18
	Physical Specifications	18
	Specifications	18
	Mechanical Characteristic	19
	Connector Types	19
	Safety and Regulatory Markings	21
	Declaration of Conformity	22
4	Service Information	23
	Replaceable Parts	24

This page is intentionally left blank.

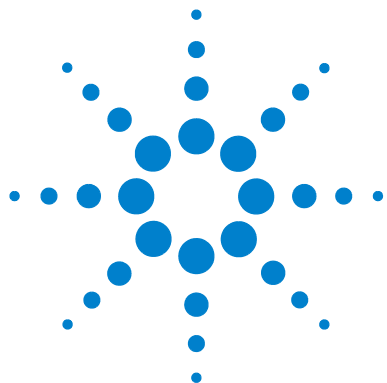

1

Introduction

Product Overview 12

This chapter provides an overview of the Agilent 281A/B Adapters.



Product Overview

Agilent 281 adapters provide a convenient means of coupling between waveguide and coaxial systems. Power can be transmitted in either direction, and each adapter covers the full frequency range of its waveguide size with an SWR of less than 1.30. The flanges are lapped to a slight, controlled convexity to assure minimum leakage at the waveguide joint. A probe transforms the waveguide impedance to the 50- Ω impedance of coaxial line. Complete specifications for the adapters are given in Table 1.

Examples of the waveguide flange and coaxial connectors used on these adapters are shown in Figure 1-1. One type of flange and two types of coaxial connectors are used: Type N female connectors (which are compatible with connectors conforming to MILS-71), are available on all 281A adapters and Amphenol precision 7-mm connectors (available on the 281B adapters). The 7-mm connector features precise alignment, a clearly defined reference plane, and low RF leakage. In addition, any pair can be connected together without an adapter. Option 013 adapters have stainless steel Type N female connectors and are available on the P281B.


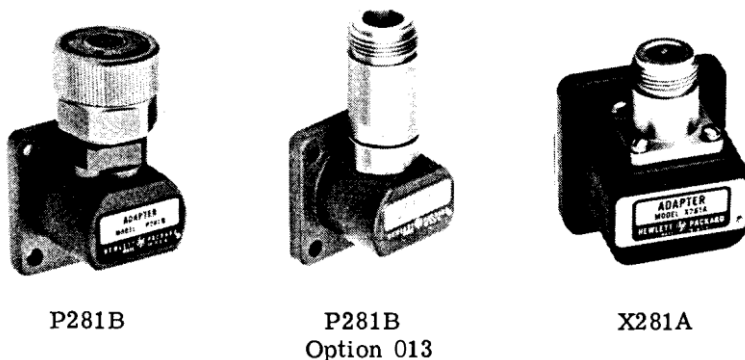


Figure 1-1 Adapters Showing Flange Types and Coaxial Connector Styles

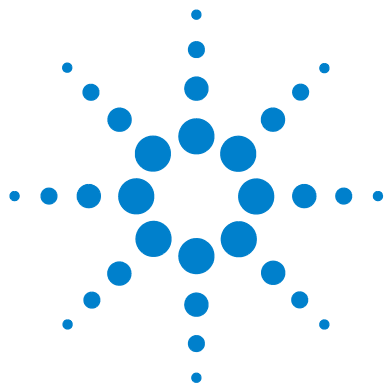

2 Installation

Initial Inspection 14

Operation 16

[“Protect Flanges”](#) on page 16

[“Operating Procedure”](#) on page 16

[“Performance Test”](#) on page 16

This chapter provides you important information on how to check and prepare your instrument for operation.



Initial Inspection

- 1 Unpack and inspect the shipping container and its contents thoroughly to ensure that nothing was damaged during shipment. If the shipping container or cushioning material is damaged, the contents should be checked both mechanically and electrically. Check for mechanical damage such as scratches or dents. If the shipping container is not damaged, check the packaging material for signs of stress that indicate rough handling in transit. If the adapter appears undamaged, perform the electrical check.

The electrical performance of the adapter should be checked as soon as possible after receipt against the specifications shown in [Table 3-1](#) on page 18. If the adapter does not perform within the specifications, see the following steps for recommended claim procedure and repackaging the instrument.

- 2 If the contents are damaged or defective, contact your nearest Agilent Technologies Service and Support Office. Refer to [“Contacting Agilent”](#) in the front matter of this manual. Agilent Technologies will arrange for repair or replacement of the damaged or defective equipment. Keep the shipping materials for the carrier’s inspection.
- 3 If you are returning the instrument under warranty or for service, repackaging the instrument requires original shipping containers and materials or their equivalents. Agilent Technologies can provide packaging materials identical to the original materials. Refer to [“Contacting Agilent”](#) in the front matter of this manual for the Agilent Technologies nearest to you. Attach a tag indicating the type of service required, return address, model number, and serial number. Mark the container **FRAGILE** to assure careful handling. In any correspondence, refer to the instrument by its model number and serial number.
- 4 If you are repackaging the instrument with commercially available materials, use the following general instructions:
 - a Wrap the adapter in heavy paper or plastic. (If shipping to an Agilent Technologies office or service center,

attach a tag indicating the type of service required, return address, model number, and serial number.)

- b** Use a strong shipping container. A double-wall carton made of 350-pound test material is adequate.
- c** Use enough shock-absorbing material (3 to 4-inch layer) around all sides of the adapter to provide firm cushioning and prevent movement inside the container.
- d** Seal the shipping container securely.
- e** Mark the shipping container ***FRAGILE*** to assure careful handling.

Operation

Protect Flanges

Care should be taken to protect the face of the flange from any damage that would prevent close surface-to-surface contact. Any burring, denting, or scratching will increase RF leakage and the reflection coefficient of the joint. The supplied plastic cover should be used to protect the flange when the adapter is not in use.


Operating Procedure

Use the following procedure when you connect an adapter to a waveguide.

- 1** Make sure the rectangular ports are oriented the same way (i.e., not "cross-guided").
- 2** Align ports carefully to minimize reflections.
- 3** Clamp or bolt flanges securely together so that pressure is evenly distributed over the contacting surfaces. Loose joints and flange distortion result in leakage and mismatch.

Performance Test

The maximum SWR for the adapters are listed in [Table 3-1](#) on page 18. When making these measurements, the test results must be less than those listed in [Table 3-1](#) plus the measurement uncertainty of the measurement system. Measurements may be made using a standard reflectometer setup. To ensure satisfactory performance, make sure flanges and coaxial connectors are not damaged or worn.

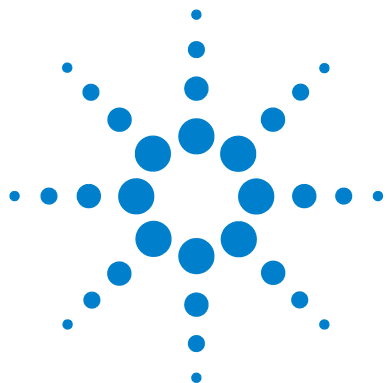

3 Specification

General Specifications	18
“Physical Specifications” on page 18	
“Specifications” on page 18	
Mechanical Characteristic	19
“Connector Types” on page 19	
Safety and Regulatory Markings	21
Declaration of Conformity	22

This chapter provides the specifications of the Agilent 281A/B Adapters.



General Specifications

Physical Specifications

Model	X281A	P281B
Weight	0.1 kg (1/4 lb)	0.1 kg (3/16 lb)
Length	37 mm (1-7/16 in)	26 mm (1 in)

Specifications

Table 3-1 Specifications

Model	X281A	P281B
Frequency range (GHz)*	8.20 to 12.40	12.40 to 18.00
Fits waveguide size:		
Nom. OD (in.)	1 x 1/2	0.702 - 0.391
EIA	WR90	WR62
Equivalent flange	UG135/U	UG419/U
Coaxial connector†	N female	APC-7‡

* Maximum Reflection Coefficient: 0.11 (1.25 SWR) over entire frequency range.

† Typical maximum power handling capability for the Type N and APC-7 connectors is 200 W (refer to caution below).

‡ Option 013 furnished with stainless steel Type N female connector.

CAUTION

The power that can be handled will be a function of the size of the center conductor. The majority of the heat flow will be via conduction. The weak point is the coax portion. The waveguide portion is capable of higher power. These numbers are assuming an ambient temperature of 25 °C and an altitude of sea level. Higher ambient temperatures and altitude would degrade power-handling capability.

Mechanical Characteristic

Connector Types

Type N Connectors

Two versions of the Type N coaxial connector are used on the adapters: one is used on the 281A model, and the other is used in the 281B Option 013 model.

The version on the 281A model is plated brass and is compatible with connectors conforming to MIL-C-71. The version on the 281B Option 013 model is stainless steel and is compatible with connectors conforming to MIL-C-71 or MIL-C-39012.

Dimensions of these connectors are given in [Figure 3-2](#) and [Table 3-2](#).

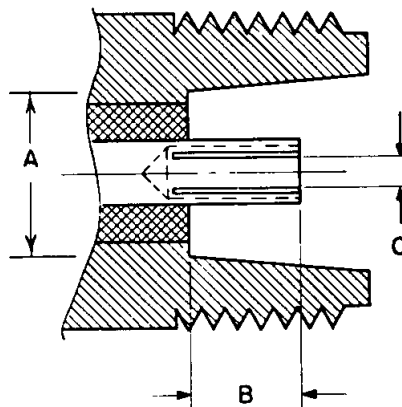


Figure 3-2 Dimensions of Type N Connectors

Table 3-2 Dimensions of Type N Connectors

Model	281A	281B
A	0.316 min	0.316 min
	0.320 max	0.320 max
B	0.188 min	0.204 min
	0.206 max	0.207 max
C	0.063 min	0.063 min
	0.066 max	0.066 max

Precision 7 mm Connectors


Except for Option 013, the 281B model adapter has an APC-7 precision 7-mm coaxial connector. These connectors rely on uniform end-to-end contact of both conductors for electrical continuity. Consequently, the condition of the contacting surfaces is critical: they should be kept clean and smooth. To prevent damage when the adapter is not in use, the connector's threaded sleeve should be fully extended.

Safety and Regulatory Markings

	This symbol indicates that you should refer to the instrument's instruction manual for important information.
	This symbol indicates hazardous voltages.
	The laser radiation symbol is marked on products that have a laser output.
	This symbol indicates that the instrument requires alternating current (ac) input.
	The CE mark is a registered trademark of the European Community. If it is accompanied by a year, it indicates the year the design was proven.
	The CSA mark is a registered trademark of the Canadian Standards Association.
ISM1-A	This text indicates that the instrument is an Industrial Scientific and Medical Group 1 Class A product (CISPER 11, Clause 4).
	This symbol indicates that the power line switch is ON.
	This symbol indicates that the power line switch is OFF or in STANDBY position.

Declaration of Conformity

A copy of the Manufacturer's Declaration of Comformity for this instrument can be obtained by contacting your local Agilent Technologies sales representative.

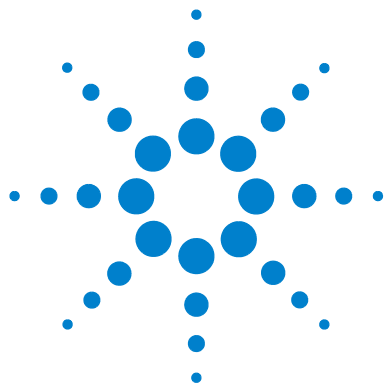

4 Service Information

Replaceable Parts [24](#)

This chapter lists the available replaceable parts for the Agilent 281A/B Adapters.



Replaceable Parts

The 281A may be disassembled for part replacement, but the 281B should be returned to Agilent because liquid nitrogen and special wrenches and gauges are needed for assembly.

The exploded view of [Figure 4-1](#) gives information for ordering replaceable parts and can be used as an assembly guide. To obtain a replaceable part, give the adapter's full model number and part number from [Table 4-1](#), and address the order to the nearest Agilent Technologies office.

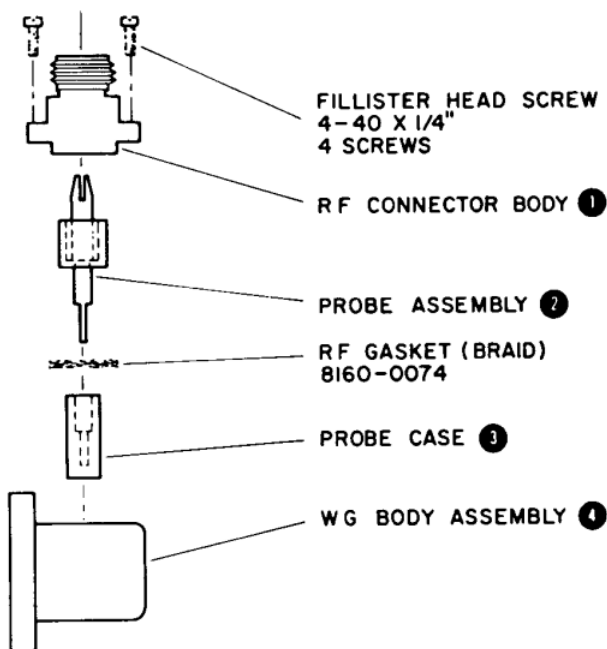


Figure 4-1 281A Replaceable Parts

Table 4-1 281A Replaceable Parts

Item No.	Description	Model No.	Agilent Part No.
1	RF Connector body	X281A	5020-0213
2	Probe Assembly: Probe Body* Probe Insulator*	X281A	Not applicable 00281-20025 00281-20106
3	Probe Case	X281A	X281A-5
4	X-band	X281A	00281-20017
	Flange Cap (not shown):		
	X-band	X281A	5040-0354
	P-band	P281B	5040-0358

* This part is a subcomponent of item number 2 (Probe Assembly for X281A).

NOTE

All 281B adapters should be returned for part replacement.

This page is intentionally left blank.